


Falra szerelhető telepítés (MeetingBoard Pro)


A kezelési videót lásd a [Falra szerelt - szerelt Teams/Falra- Zoom](#) című oldalon.

A csomag tartalma

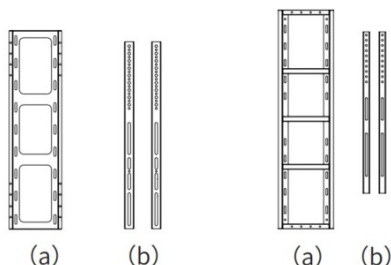


MB-WallMount-650 MB-WallMount-860

Wall-mounted bracket

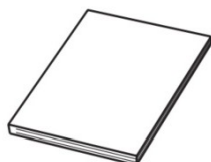

Quick Start Guide
(Wall-Mounted)

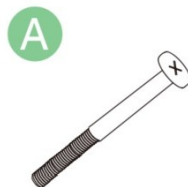

Security screw x 2
(M5*100mm)




Screw x 4
(M8*35mm)
*For locking the back of
the endpoint




Rubber gasket x 5
($\phi 32$)

*Pad on the back of the
endpoint

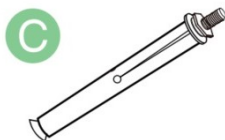


Expansion bolt x 8
(8*80mm)

*For vertical, load-bearing solid
wall or concrete wall

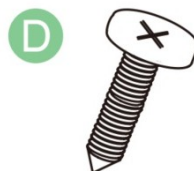

Self-tapping screw x 8
(6*50mm)

*For planks or other rein-
forced walls

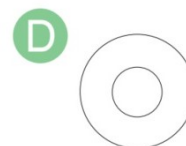

Metal gasket x 8
($\phi 8 \times 1.6$ mm)

*For fixing self-tapping
screws

Végpont telepítése



Take and place all components gently to avoid damage.



MeetingBoard 65&75&86 Pro

At least 2 people are required to transport and install 65-inch and 75-inch hosts.

At least 4 people are required to transport and install 86-inch hosts.




1. A falra szerelhető konzol (a) telepítési pozíciójának meghatározása

Recommended Size of Yealink Wall-Mounted Bracket

Model	Suitable for wall rack models	Installation height of wall rack (from the ground)	Recommended screw hole position for Vesa vertical rod
65 Pro	MB-WallMount-650	1487mm	It is recommended that the screw be locked to the 3rd hole of the wall mount
75 Pro	MB-WallMount-860	1475mm	It is recommended that the screw be locked to the 5th hole of the wall mount
86 Pro	MB-WallMount-860	1528mm	It is recommended that the screw be locked to the 2nd hole of the wall mount





The following is the installation diagram of height and hole position. Users can install according to the recommended installation height and screw hole position. If the installation height is slightly inappropriate, it can also be adjusted according to actual needs.

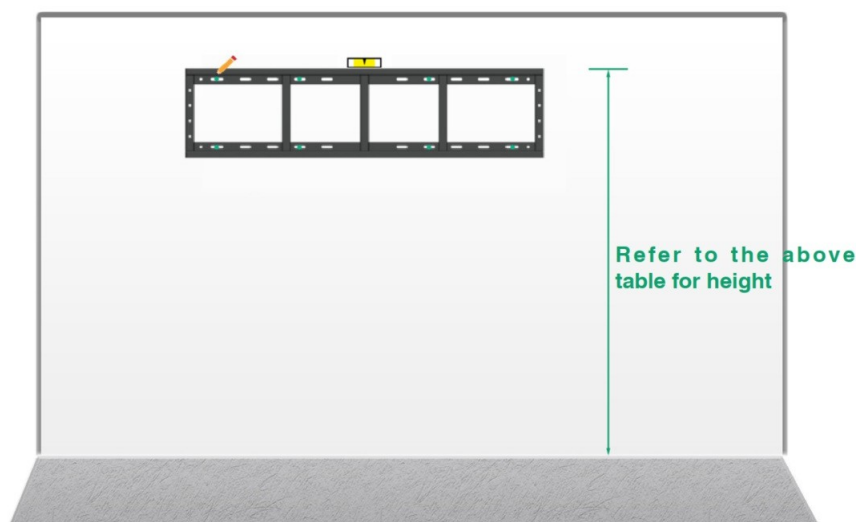

Installation Video

2. Rögzítse a tágitócsavarokat/önmetsző csavarokat a falon megjelölt helyeken.


C
X 8
Expansion screw body part (8*80mm)
(Need to remove the nut first)

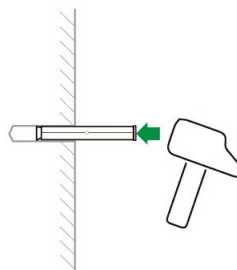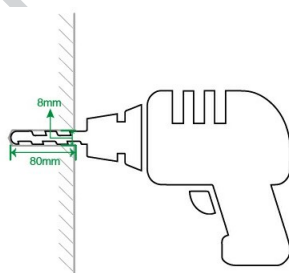

If the wall is planks, other reinforced walls, install wall-mounted bracket with in-package self-tapping screws.


Methods: To install wall-mounted bracket, sleeve the self-tapping screw (6*50mm) into the metal gasket, then drill it into the wall.

3. Szerelje fel a falra szerelhető konzolt (a) a falra.

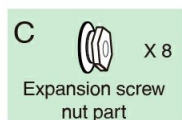

3


4. Szerelje fel a falra szerelhető konzolt (b) a végpont hátuljára.

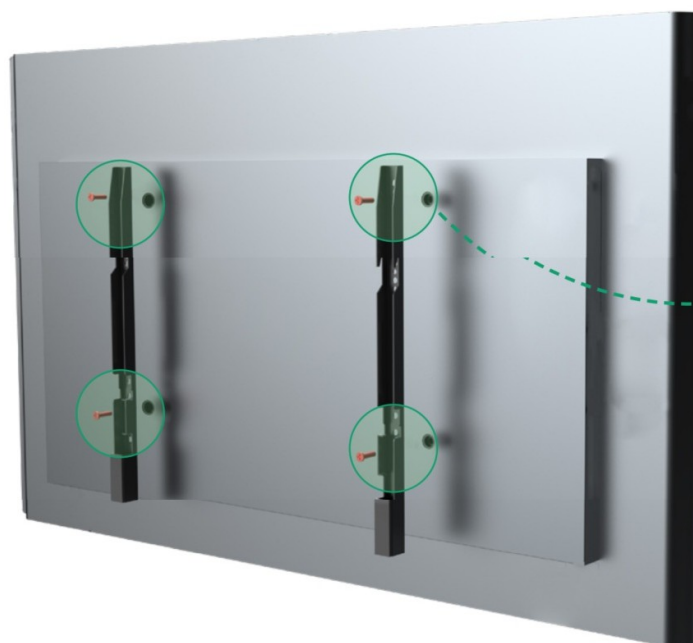

Please refer to the above table for the hole position according to the model. The order of the hole position listed in the table is from top to bottom.





5. Szerelje fel a végpontot és rögzítse a biztonsági csavart a végpont hátoldalán

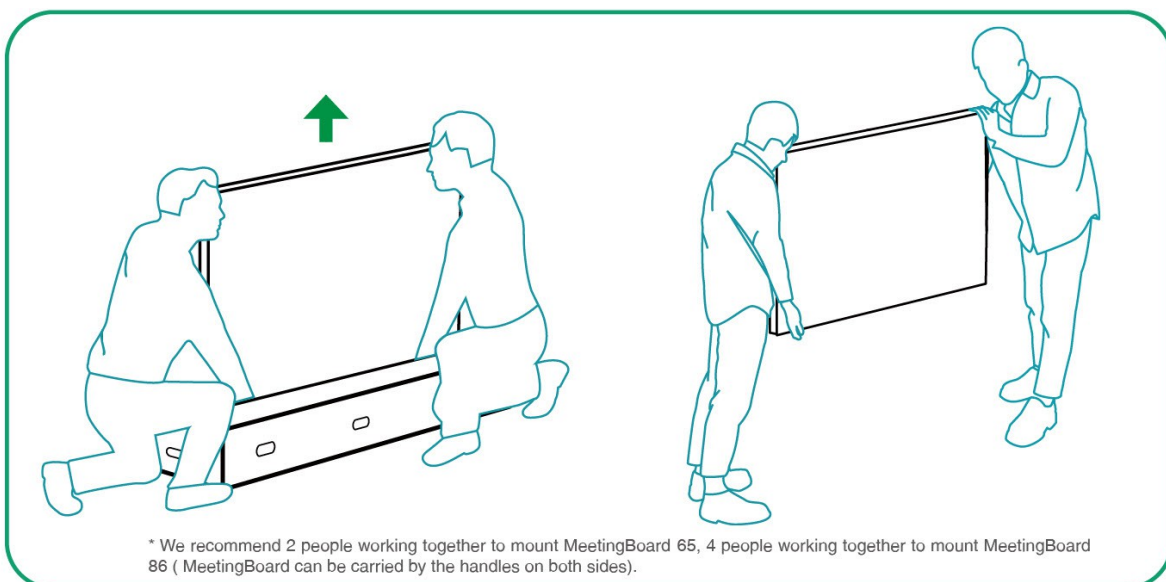


If the power port and network port of the conference room are located on the back wall of the endpoint to be installed, connect the cables first before installing the endpoint.



The wall-mounted bracket (b) on both sides need to be snapped into the slots at the same time.

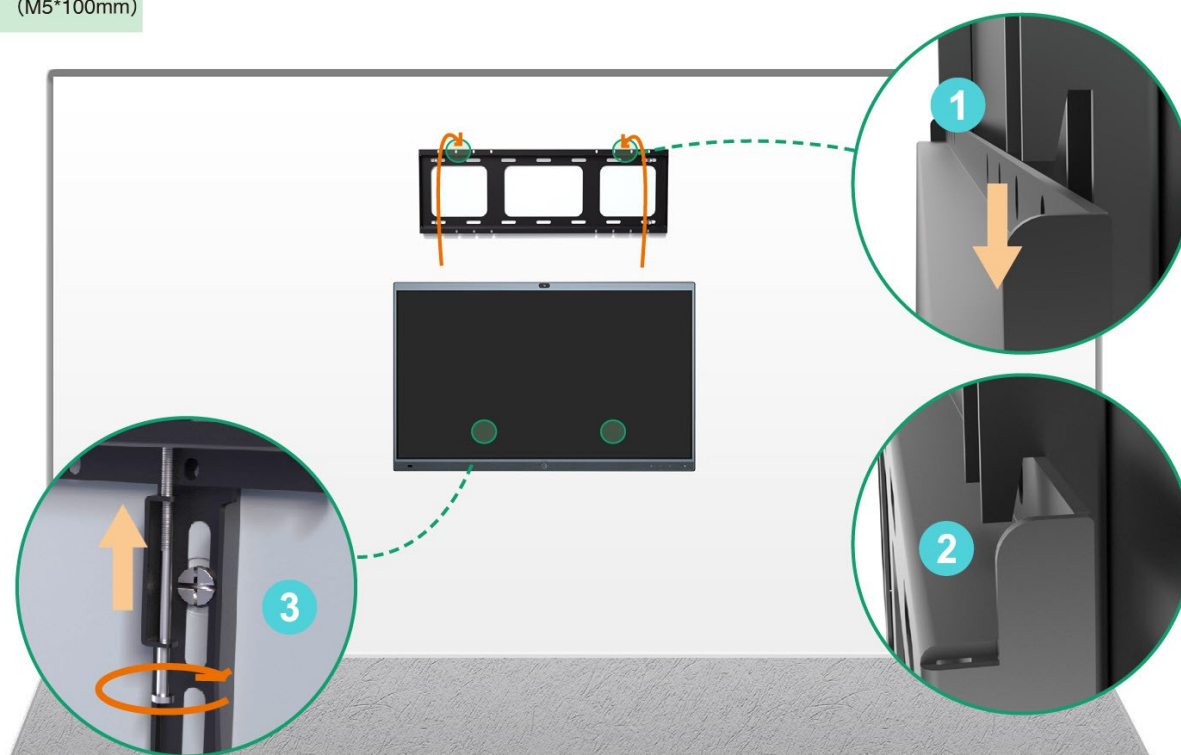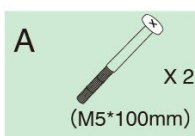


A hardverkomponensekre vonatkozó utasítások

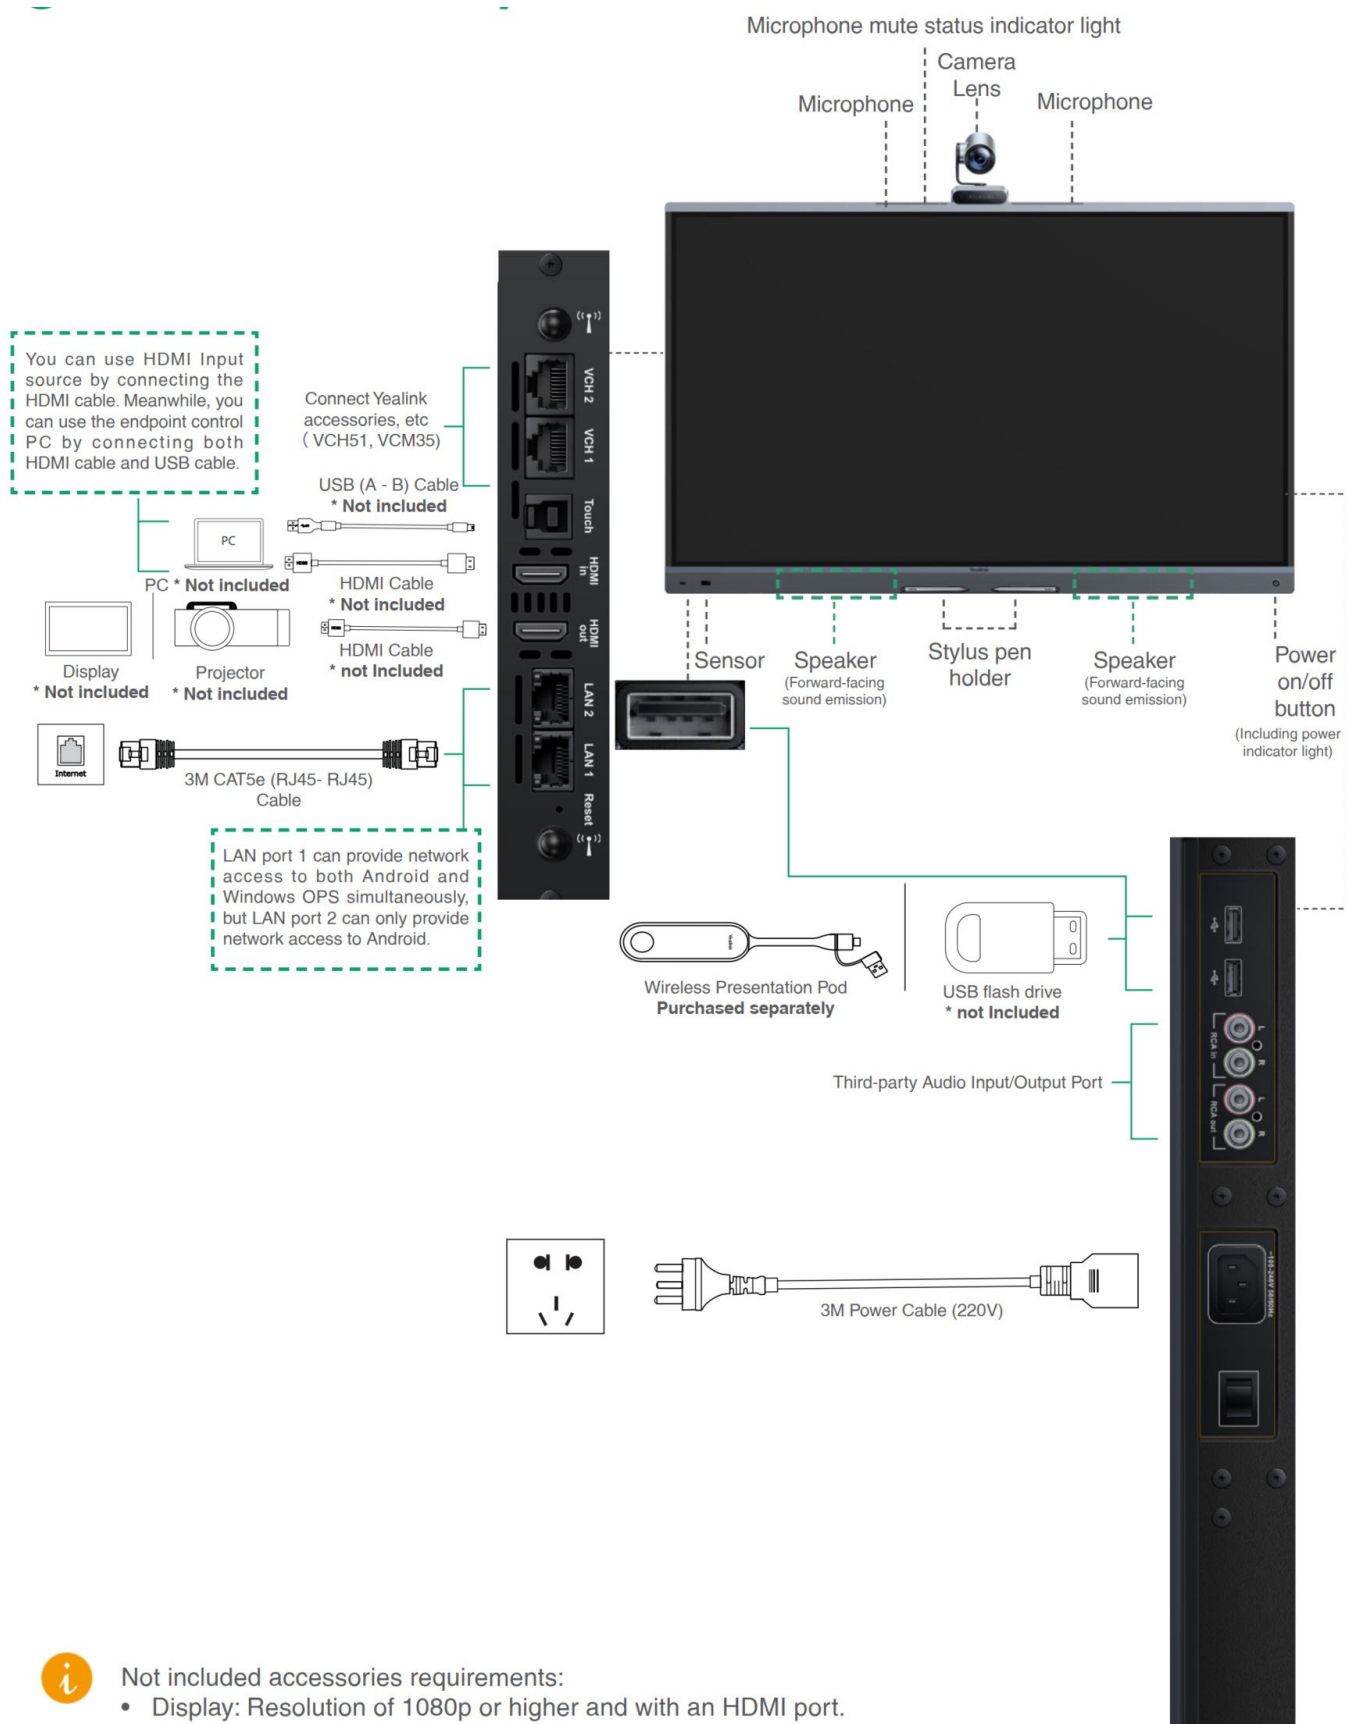

Not included accessories requirements:

- Display: Resolution of 1080p or higher and with an HDMI port.
- PC: Equipped with HDMI or USB-A Port.
- USB flash drive: With USB-A port.
- HDMI: Standard HDMI cable.
- USB-B cable: USB 2.0 (A - B) cable.

Bekapcsolás

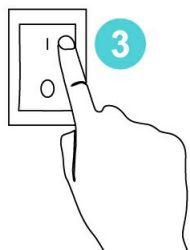


1. Insert the end of the power cable into the power port of the endpoint.
2. Insert the power cord plug into the outlet.
3. Turn the rocker switch button on the right rear of the endpoint to "I" to turn on the endpoint.

Upon first power-on of the endpoint, follow the on-screen setup wizard to configure language, time, network, etc., to initialize the configuration. The initialization operations vary with software versions.

 After the endpoint is started for the first time or restored to factory settings, go to settings on the touchscreen to configure the admin password (default password:0000).

Áramkimaradás

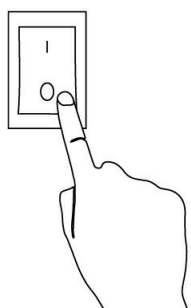

Turn the rocker switch button on the right rear of the endpoint to "O" to turn off the endpoint.

A telepítés telepítése után a [Gyorsbeállítás - Teams/Gyorsbeállítás - Zoom](#) menüpontban tájékozódhat a nagy képernyő beállításához. A beállítás után az általános funkciók megismeréséhez tekintse meg a [Gyors használat - Teams/Zoom használat](#) című részt.